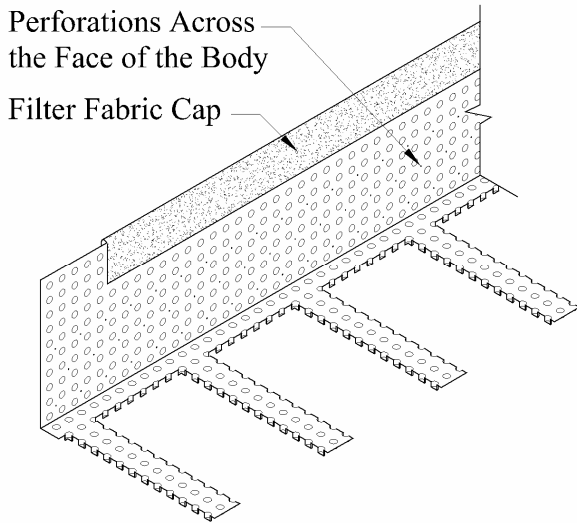

Installation Instructions

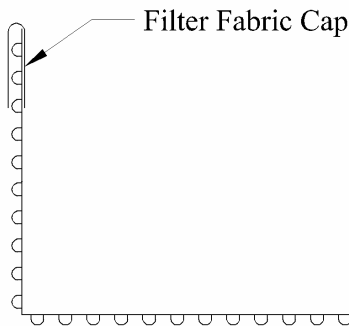
HORIZONTAL WEEP

Thru Wall Flashing Drain and Cavity Vent

Polyguard Horizontal Weeps (HW) are a ¼" dimple board designed for draining Through Wall Flashing (TWF) and venting wall assembly spaces on the exterior side of a flashing and venting wall.



Shown bent for a 1-inch cavity application



End View

Storage: Protect the materials from heat, crushing, moisture, mud, and construction dirt. Keep the product in the package until it will be used.

Safety: Material Safety Data Sheets are available upon request by phone, e-mail, or on the web.

Sequential Installation Instructions

Orient the bottom of the cups (dimples) to interface with the face of the flashing.

Shape the main body over the face of the flashing so that the lower edge will align along where the back of the exterior finish will be and with the ends of the weeps extending beyond where the face of the exterior finish will be.

Fasten to framing members with cap nails or cap screws.

Install the exterior finish.

Trim the weep extensions flush with the face of exterior finish after the finish has been installed.

© Polyguard Products 2010

X:/Lit/Arch/2010/Horizontal Weep Installation Instructions. Doc R 5-14-10

P.O. Box 755
Ennis, TX 75120
PH: (214) 515-5000
FX: (972) 875-9425

This information is based on our best knowledge, but
POLYGUARD cannot guarantee the results to be obtained.

www.polyguardproducts.com

www.reactivegel.com

www.denovus.com

