



STEP 5

APPLY 650 LT LIQUID ADHESIVE TO THE SURFACE OF THE UNDERSEAL™ XT 850 AND APPLY A PIECE OF 606 TAPE. FIRMLY PRESS THE FLAP AGAINST THE WALL TO ADHERE THE FORMED PIGS EAR TO THE WALL

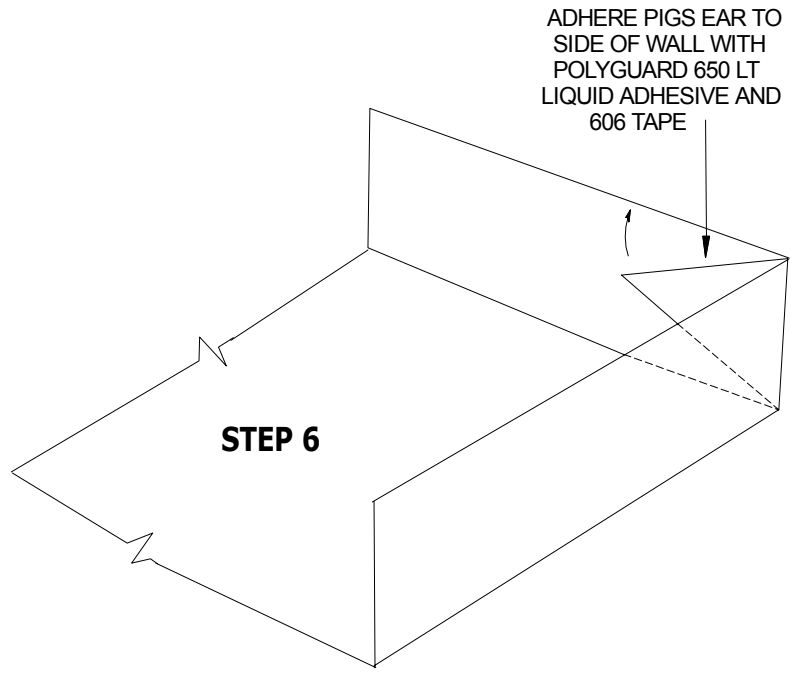

ADHERE PIGS EAR TO SIDE OF WALL WITH POLYGUARD 650 LT LIQUID ADHESIVE AND 606 TAPE

STEP 6

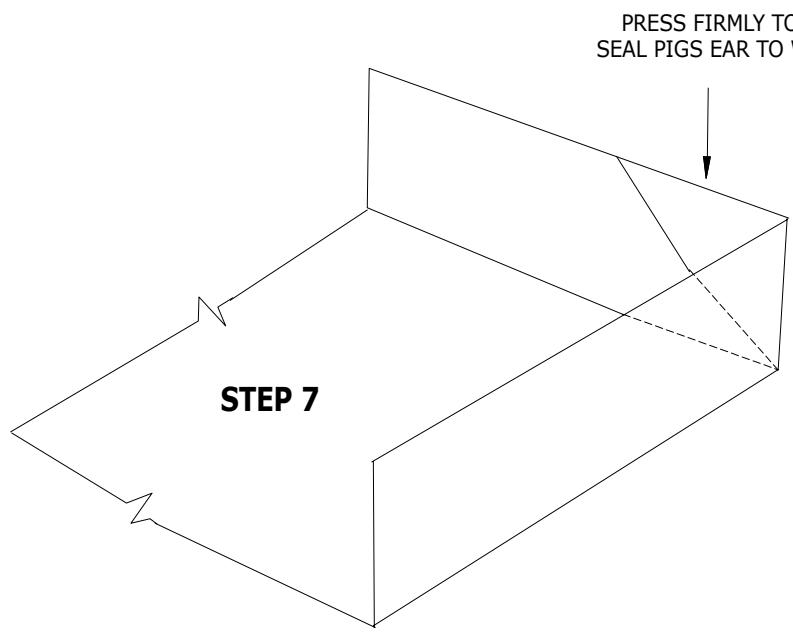

PRESS FIRMLY TO SEAL PIGS EAR TO WALL

STEP 7