


Detail  
20


Piece 1

Cut 2 pieces of the 12" - 18"  
wide Polyguard 300/400 Thru Wall  
Flashing Membrane.

Piece 2

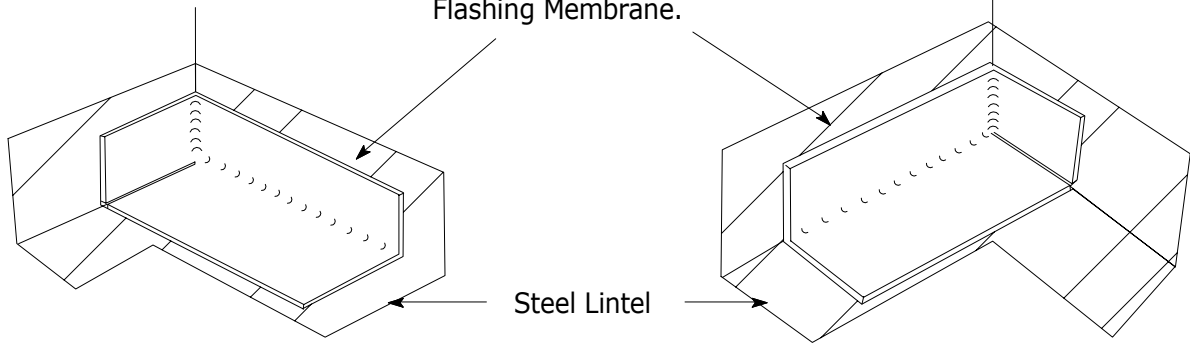

Steel Lintel

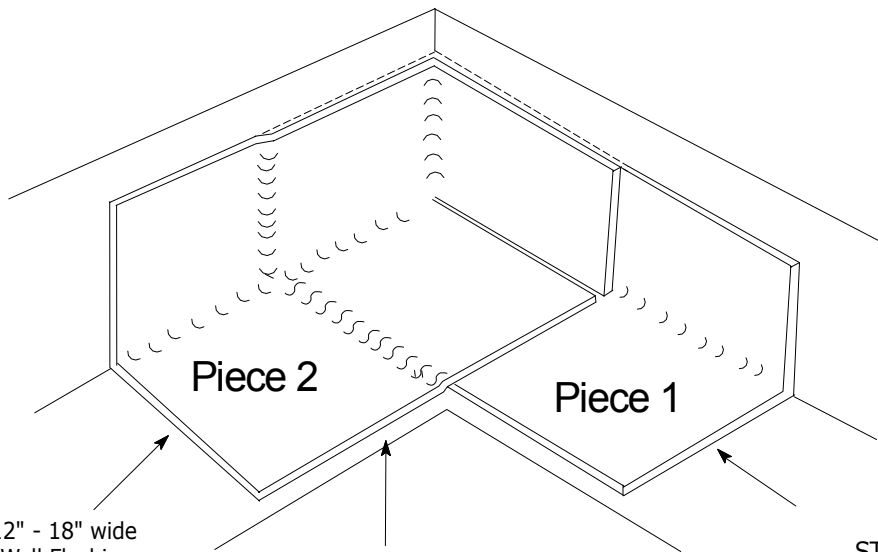

STEP 2  
install piece#2 of the 12" - 18" wide  
Polyguard 300/400 Thru Wall Flashing over  
piece #1 and prepared substrate  
making sure all seams are sealed

STEP 3  
Make sure the flashing membrane  
is cut back from the exterior finish 1/2"

STEP 1  
install piece#1 of the 18"  
wide Polyguard 300/400 Thru Wall  
Flashing to prepared substrate

## SECTION STEEL LINTEL @ INSIDE CORNER

© POLYGUARD PRODUCTS, INC. 2002 - INSIDECORNER



Polyguard Products, Inc.  
P.O. Box 755  
Ennis, TX 75119  
Phone: 972-875-8421  
Fax: 972-875-9425

Web Site - [www.polyguardproducts.com](http://www.polyguardproducts.com)

The information provided is based on data and knowledge considered to be true and accurate and is offered for the users' consideration, investigation and verification, but we do not warrant the results to be obtained. Please read all data sheets, statements, recommendations or suggestions in conjunction with our conditions of sale, which apply to all goods supplied by us.