


STEPS:

- 1) MEASURE BATH TRAP OPENING, ADDING 2" ON EVERY SIDE.
- 2) CUT A SECTION OF TERM MICROMESH 02 TO FIT OVER THE BATH TRAP WITH A 2" OVERLAP ONTO THE CONCRETE ON EVERY SIDE.
- 3) PLACE THE WIRE SCREEN ON TOP OF THE BATH TRAP PENETRATION, MAINTAINING 2" OVERLAP ONTO THE CONCRETE ON EVERY SIDE.
- 4) USING A MALLETT, MAKE A CIRCULAR INDENTATION IN THE SCREEN OF THE PENETRATION OUTLINE.
- 5) USING A BOX CUTTER AND WIRE SHEERS, AND USING THE INDENTION AS A GUIDE, CUT A HOLE IN THE WIRE SCREEN.
- 6) TEST FIT WIRE SECTION OVER THE PENETRATION. ADJUST THE SIZE OF THE HOLE IF NECESSARY.

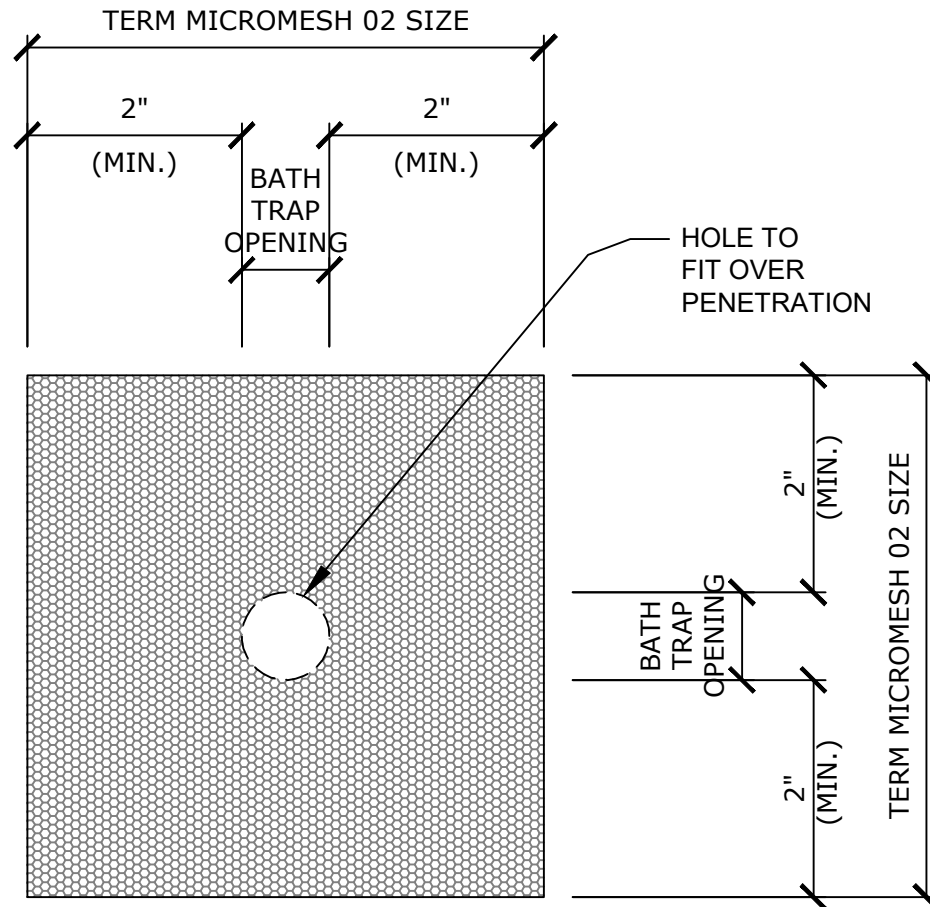

TPC4a

SECTION @ TERM[®] MICROMESH 02 WIRE SCREEN FOR ALL-PEST BATH TRAP

©POLYGUARD PRODUCTS, INC.

Polyguard
Innovation based. Employee owned. Expect more.
P.O. Box 755 - Ennis, TX 75120
Phone: 214-515-5000 Fax: 972-875-9425
Web Site - www.polyguardbarriers.com



The information provided is based on data and knowledge considered to be true and accurate and is offered for the users' consideration, investigation, and verification; but we do not warrant the results to be achieved. Please read all data sheets, statements, suggestions, or recommendations in conjunction with our conditions of sale, which apply to all goods supplied by us.

DRAWING SCALE:
NOT TO SCALE
EFFECTIVE DATE:
05/25/2021
SUPERCEDES:
06/18/2020