


PIPE

APPLY A 1 - 1/4" PIECE OF VAPORGUARD TAPE ONTO PIPE LEAVING RELEASE LINER ON THE BUTYL

INSTALL RGAND SMOOTH WITH ACCUTROWEL REMOVE RELEASE LINER AND SMOOTH RG UP TO VAPORGUARD

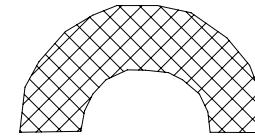


INSULATION END




INSULATION END COVERED WITH 1 - 1/4" STRIPS OF VAPORGUARD


APPLY 1 - 1/4" STRIPS OF VAPORGUARD ONTO THE END (ONLY ON ONE SIDE OF THE JOINT) OF THE INSULATION TO COVER IT COMPLETELY NO OVERLAPS, BLEND EDGES TOGETHER WITH YOUR FINGERS.

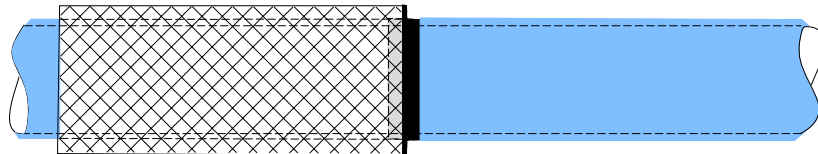


INSTALL FIRST SIDE OF INSULATION HALFWAY ONTO STRIP OF VAPORGUARD ON PIPE

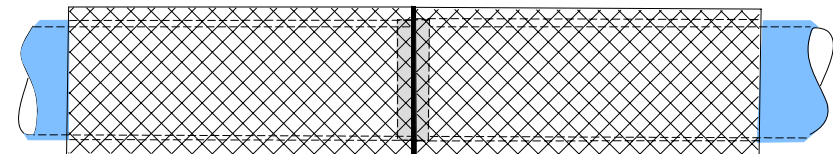

INSTALL SECOND PIECE OF INSULATION, PRESSING INTO THE FIRST PIECE INSTALLED

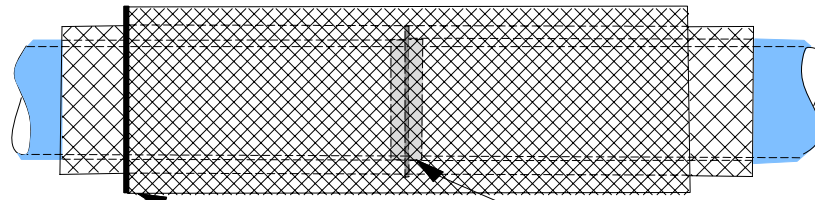

INSTALL SECOND LAYER OF INSULATION OVER VAPOR STOP, STAGGER TOP LAYER VAPOR STOP FROM INNER LAYER

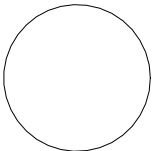

SECTION @ VAPORGUARD THROUGH INSULATION VAPOR STOP DETAIL

POLYGUARD PRODUCTS, INC. 2012

(NOT TO SCALE)

Polyguard Products, Inc.  
 P.O. Box 755 - Ennis, TX 75119  
 Phone: 214-515-5000 Fax: 972-875-9425  
 Web Site - [www.polyguardproducts.com](http://www.polyguardproducts.com)

**Polyguard**

The information provided is based on data and knowledge considered to be true and accurate and is offered for the users' consideration, investigation and verification, but we do not warrant the results to be obtained. Please read all data sheets, statements, recommendations or suggestions in conjunction with our conditions of sale, which apply to all goods supplied by us.