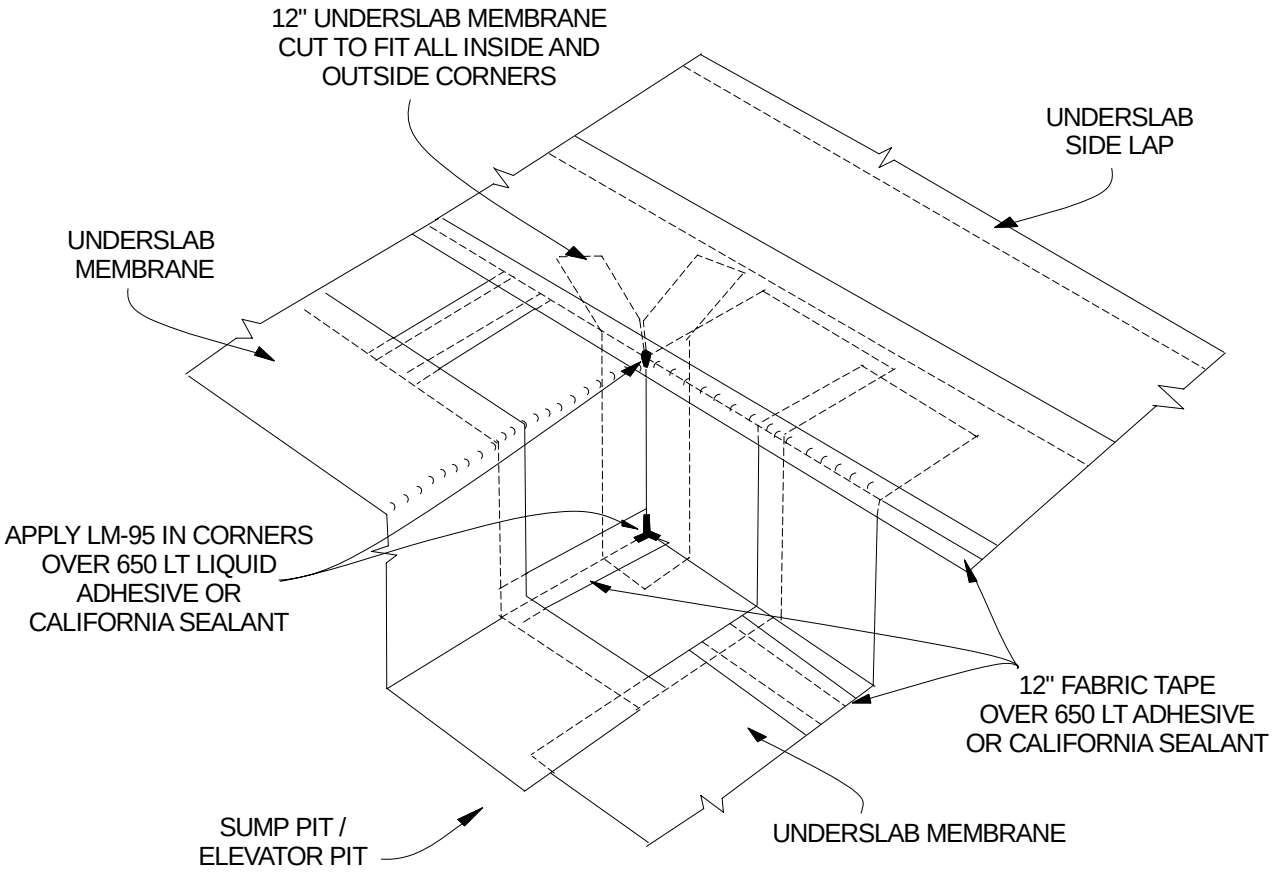

NOTE: USE 12" FABRIC TAPE ON ALL "DRY LAPS" WITH 6" OVERLAP REQUIRED. INSTALL OVER 650 LT LIQUID ADHESIVE OR CALIFRONIA SEALANT

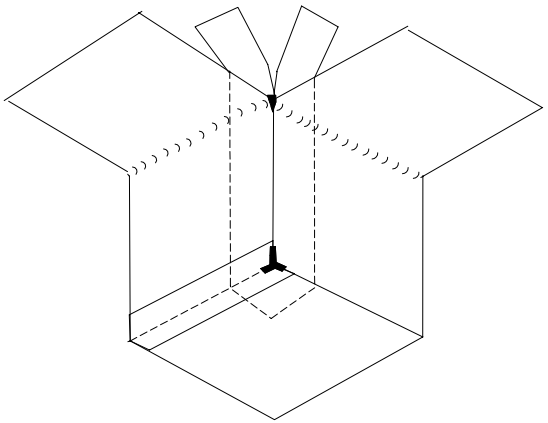

CUT AND FOLD
CORNER DETAIL

US10

SECTION @ UNDERSLAB SUMP PIT OR ELEVATOR DETAIL

© POLYGUARD PRODUCTS, INC. 2008
(NOT TO SCALE)

Polyguard Products, Inc.
P.O. Box 755 - Ennis, TX 75119
Phone: 214-515-5000 Fax: 972-875-9425
Web Site - www.polyguardproducts.com
x\u\s\n\d\underseal\07\udnerslab\US10

Polyguard

The information provided is based on data and knowledge considered to be true and accurate and is offered for the users' consideration, investigation and verification, but we do not warrant the results to be obtained. Please read all data sheets, statements, recommendations or suggestions in conjunction with our conditions of sale, which apply to all goods supplied by us.